

Wireless 802.11 A/B/G/N USB Dongle Quick Install Manual

Package Contents

Check to make sure you have all the contents within your package:

- The Wireless LAN USB Dongle
- Setup CD (Driver, software and User's Guide)
- Quick Install Guide

Note: Do not insert the USB Dongle until the driver has been installed.

1. Connect to a Wireless Network

Step 1 : Insert the setup CD

1. Insert the LP-8797S CD into your PC's CD/DVD driver.



Step 2 : Install Software

1. When the Menu Window show up, click "Driver installation".

NOTE : If the Menu Window fails to show up, browse the CD drive and double-click the Autoload.exe file.


2. Select your language then click "Next".

Please follow the instructions for your operating system below and to finish the LP-8797S's Driver installation.

3. Select "Yes" option and click "Finish" button to restart your computer.

Step 3 : Insert the LP-8797S USB Dongle:


1. When your PC has fully restarted, insert the USB Dongle to available USB ports.

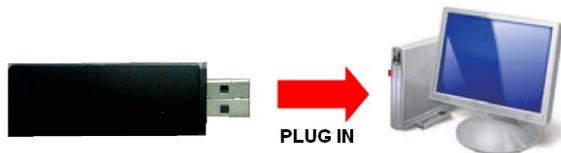

2. Open the software by double-clicking the icon on your PC desktop.




3. select the **Available Network** tab to view nearby networks and double-click the network that you're available to connect on.

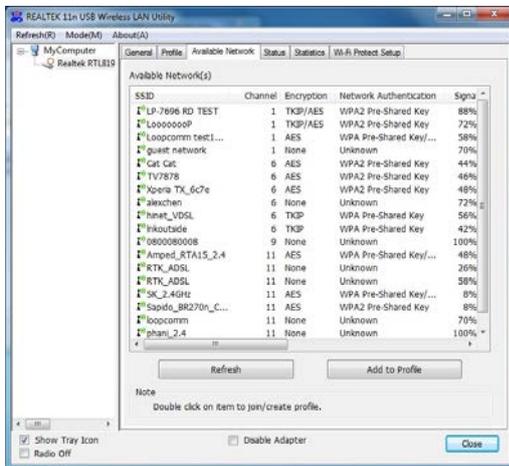

Step 4 : Connect to a Wireless Network

1. If your network has security enabled, you can enter it in the **Network Key** field and click **OK**

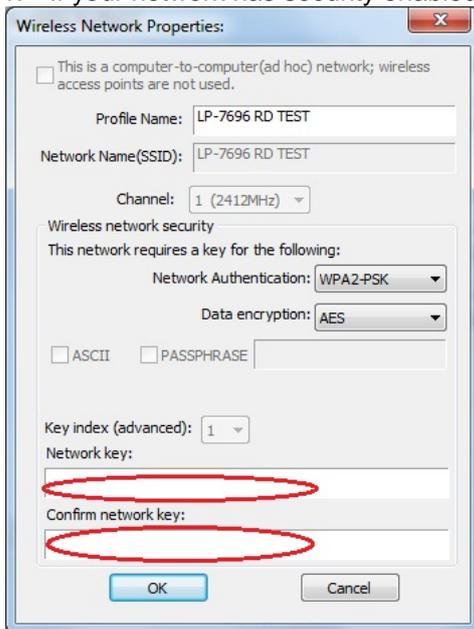

Unable to connect to a wireless network?


Ensure that LEDs of your router are correctly lit.

- Check whether your Wireless LAN settings (e.g. SSID, Channel Number) are the same as the router's
- Check whether you use the same encryption key (e.g. WEP or WPA) for both LP-8797S and the router.

2. Setup Soft AP

Step 1 : Insert the LP-8797S USB Dongle:


1. When your PC has fully restarted, insert the USB Dongle to available USB ports.

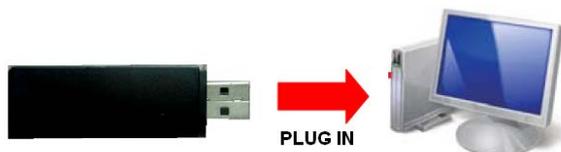

2. Open the software by double-clicking the icon on your PC desktop.



3. select soft AP device and click Config.

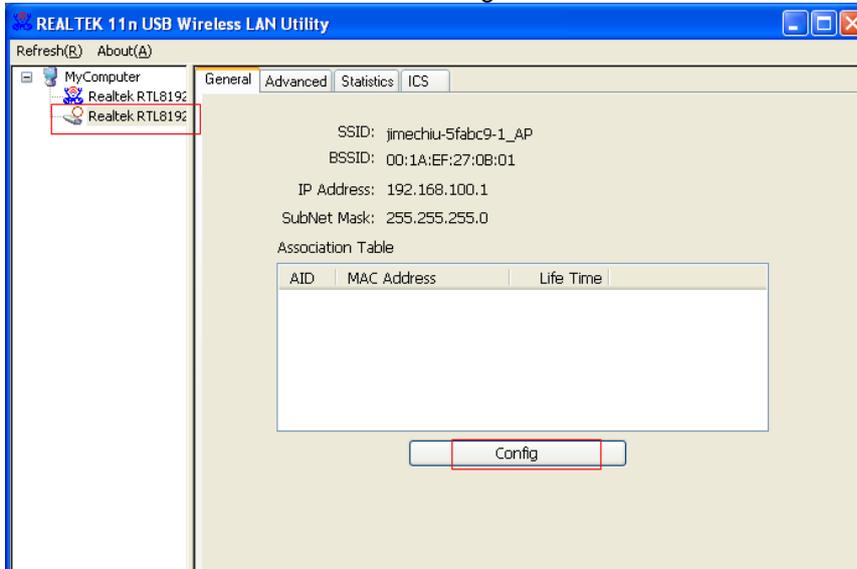

Step 2 : Wireless network Properties:

1. setup Soft AP wireless Name and security.

| Item | Description |
|---------------------------|---|
| Network Name (SSID) | It is the wireless network name. The SSID can be 32 bytes long. User can use the default SSID or change it. |
| Channel | Select Auto channel or select channel from pull-down menu. |
| Wireless network security | WEP (Wired Equivalent Privacy) is the oldest and least secure security algorithm. Use WPA or WPA2 security methods when possible. |
| Network key | The WPA2 key is an alpha-numeric password between 8 and 63 characters long. WEP Key is 10 characters long. |
| Confirm network key | Type Network key again |

2. click OK



Step 3 : Enable ICS:

1. select the **ICS** tab and Enable ICS.
2. select the network which you can share with Soft AP.
3. click **Apply**, and you can start to use Soft AP.

